


INSTRUCTION MANUAL

FPV Monitor SK-600092

SKYRC

INTRODUCTION

The 4.3" 5.8GHz FPV monitor, which has 40 channels covering A, B, E, F and R groups, is perfect for both the beginner and sophisticated FPV pilot. It display and transmit live video safely and live over a long distance.

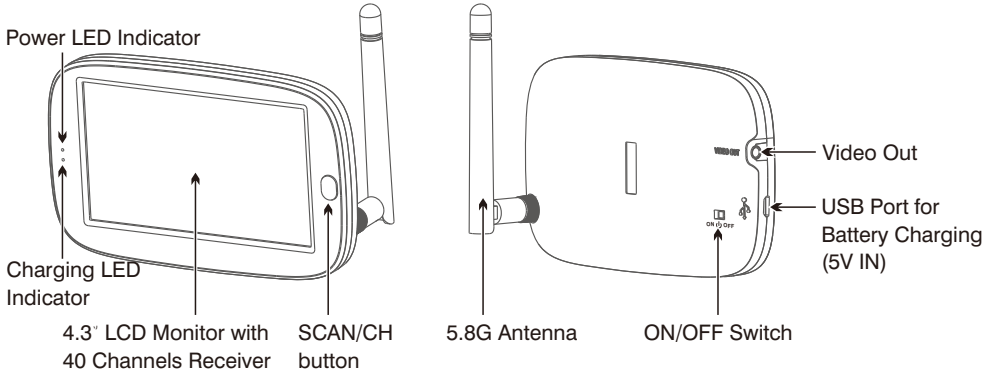

FEATURES

1. LCD size: 4.3" TFT LCD
2. Resolution: 480X272
3. Channel: 40channels, channel auto searching and manual searching
4. Frequency:

BAND	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
A	5740	5760	5780	5800	5820	5840	5860	5880
B	5725	5745	5765	5785	5805	5825	5845	5865
E	5733	5752	5771	5790	5809	5828	5847	5866
F	5705	5685	5665	5645	5885	5905	5925	5945
R	5658	5695	5732	5769	5806	5843	5880	5917

5. Built in battery: 2000mAh LiPo battery , charge via USB
6. Working time: Over 3 hours

SPECIFICATIONS


- Voltage: 3.5V-4.2V
- Current: <600mA/4.2V
- Dimension: 130x82x15.8mm
- Net Weight: 158g

OPERATION

- Connecting 5.8GHz antenna, turn the switch on.
- Press the "SCAN/CH" button for 2 seconds to start auto channel search, you can also select the desired frequency from 5 groups: A, B, E, F, and R manually by short press "SCAN/CH" button.

BATTERY CHARGING

Connect the device to a phone charger using the USB cable. The charging current can be 800mA.

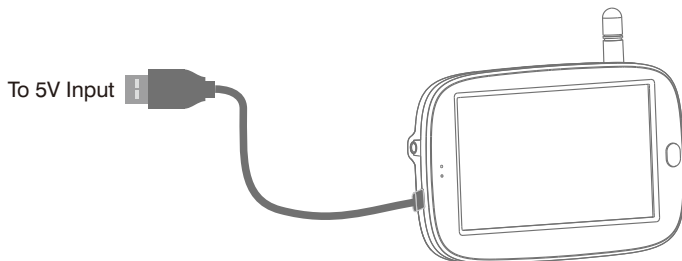

INDICATOR LIGHT

- Status 1: The charging LED indicator turn red when battery is charging
- Status 2: The charging LED indicator turn green when charge completely
- Status 3: The power LED indicator will keep green when the device is working

WARNING AND SAFTY NOTES

- Please do not place the display screen towards the ground.
- Please avoid heavy impact or drop onto the ground.
- Please do NOT use chemical solutions to clean this product. Please wipe with a clean soft cloth to maintain the brightness of the surface.
- Please do not block antenna port.



Manufactured by
SKYRC TECHNOLOGY CO., LTD.
www.skyrc.com 7504-0832-01